
HARDWARE TEST / SETTING

1. General

In this chapter, how to check the hardware of IT-G600 is explained.


The general fl ow to start up the test program is as follows:

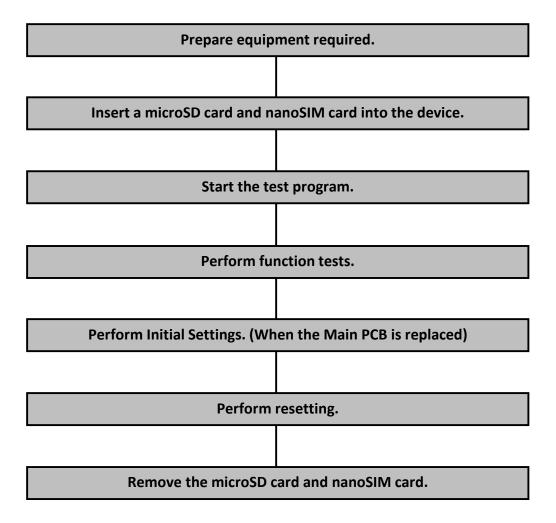

2. Test Equipment

The following shows the major equipment used for function test.

NOTE: For equipment used for the special test, see respective test items.

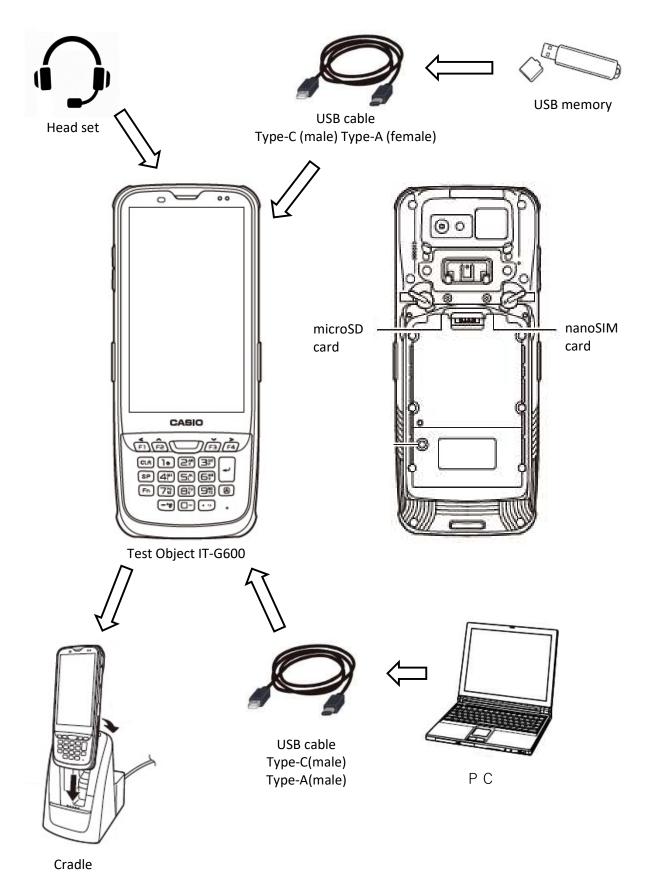

3. List of Tests


検査項目	備考
MIC/SP/Receiver	You can check the MIC/SP/Receiver.
LED/VIBRATOR	You can check the LED/VIBRATOR.
VERSION CHECK	You can check the PRODUCT VERSION.
BATTERY COVER DETECT	You can check the BATTERY COVER DETECT.
TOUCH	You can check the TOUCH PANEL.
LCD/BACKLIGHT	You can check the LCD/BACKLIGHT.
SCANNER	You can check the SCANNER.
WLAN	You can check the WLAN.
KEY	You can check the KEY.
EARJACK	You can check the Earphones JACK.
	You can check IT-G600's I/O connector correctly
IO USB DETECT	communicate with your PC.
	You can check IT-G600's I/O connector correctly
IO USB HOST	working with USB HOST device.
	You can check IT-G600's MicroUSB connector correctly
MicroUSB DETECT	communicate with your PC.
	You can check IT-G600's MicroUSB connector correctly
MicroUSB HOST	working with USB HOST device.
CAMERA	You can check the CAMERA.
NFC	You can check the NFC.
SENSOR	You can check the SENSOR.
BLUETOOTH	You can check the BLUETOOTH.
IMAGEDEMO	Do not inspect
MIC Loop	Do not inspect
CHECK MAIN SPEAKER	Do not inspect
BATTERY TEMPERTURE	You can check the BATTERY.
SIM	Do not inspect
EXT B	Do not inspect
2D AIMER	Do not inspect
WAN	You can check the WAN

4. Preparation for inspection

4-1. Insert a microSD card and SIM card into the device.


4-2. Running the Diagnostic Program

< W-LAN model>

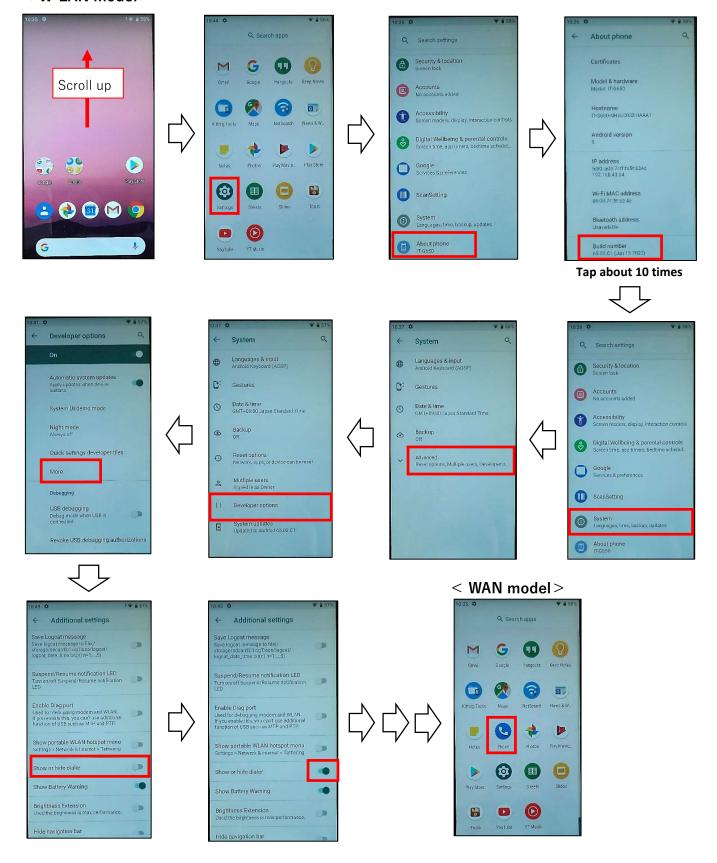



5. Test Procedures

■ SDcard

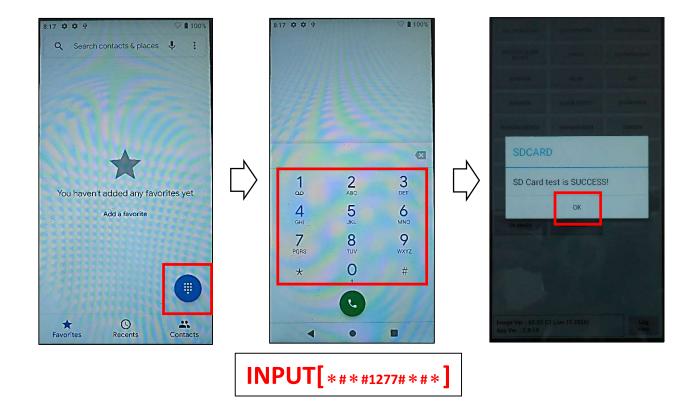

■ MIC/SP/Receiver

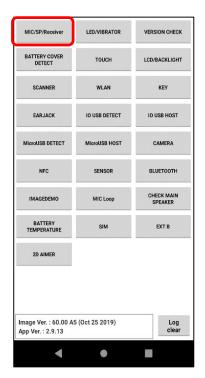

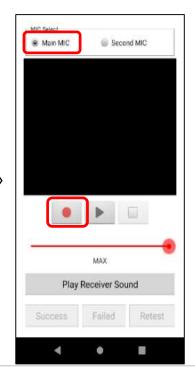



Click [Record] button.

Speak to the microphone.

Click [Play] button.
Check the recorded voice.



Click [Success] if the test result is satisfactory.




Press "Play Reciver Sound" to hear the sound




Check [Second MIC] in the same way


■ LED/VIBRATOR

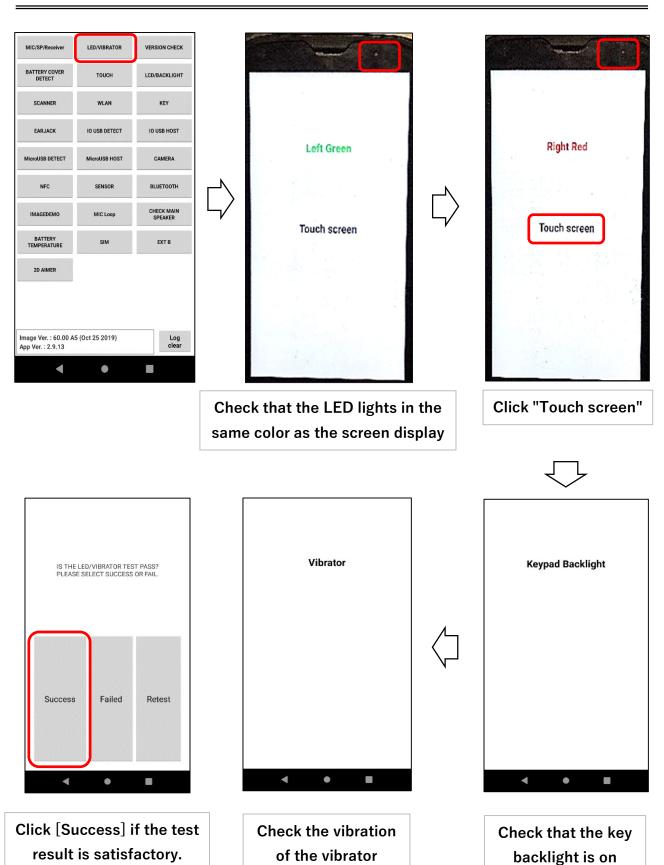


■ BATTERY COVER DETECT

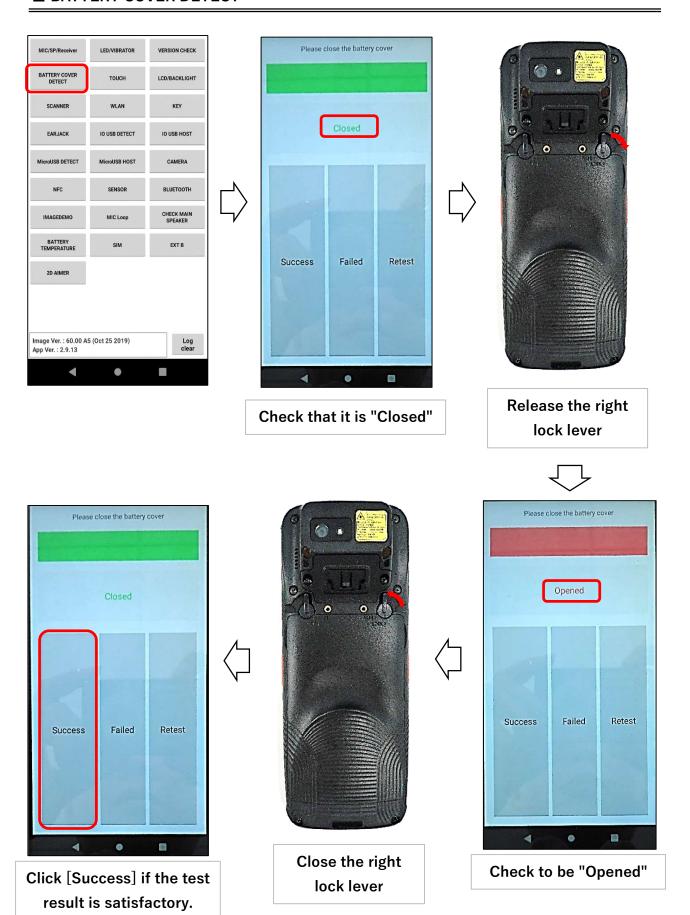


■ TOUCH

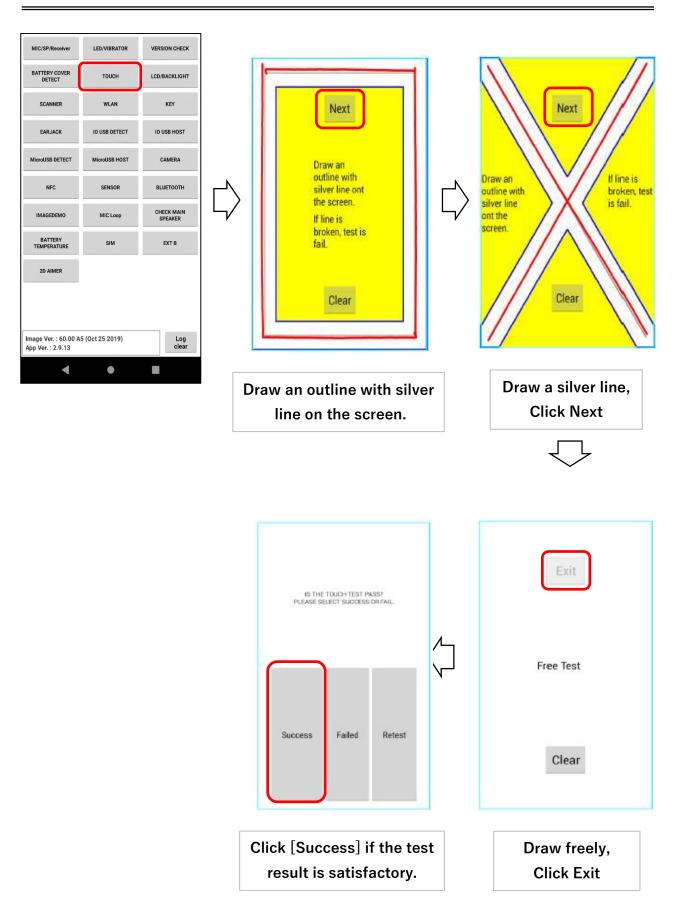

■ LCD/BACKLIGHT

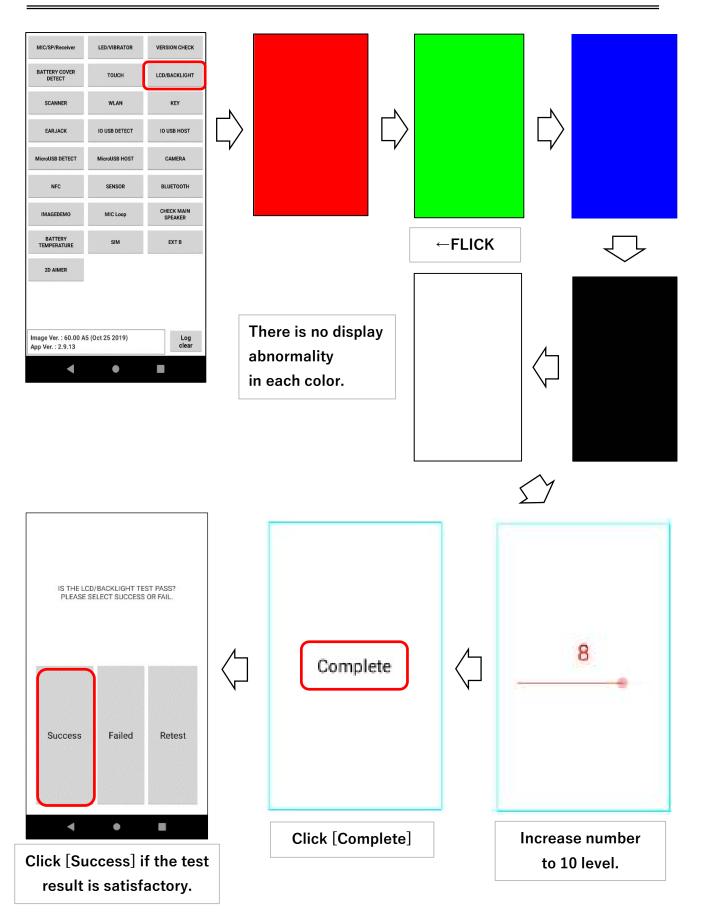

■ SCANNER

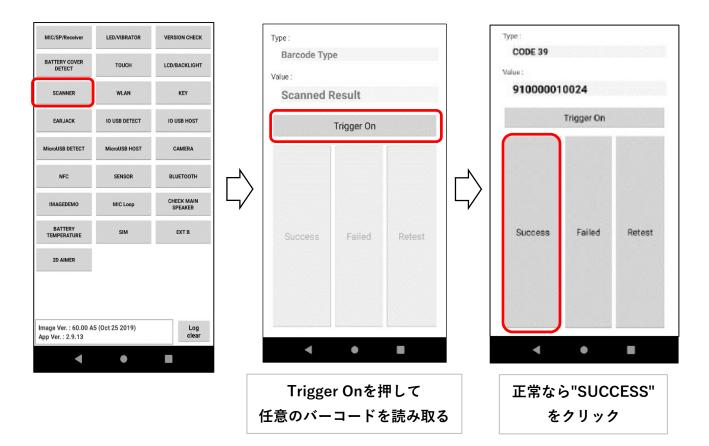


result is satisfactory.

■ WLAN




connection destination


■ KEY

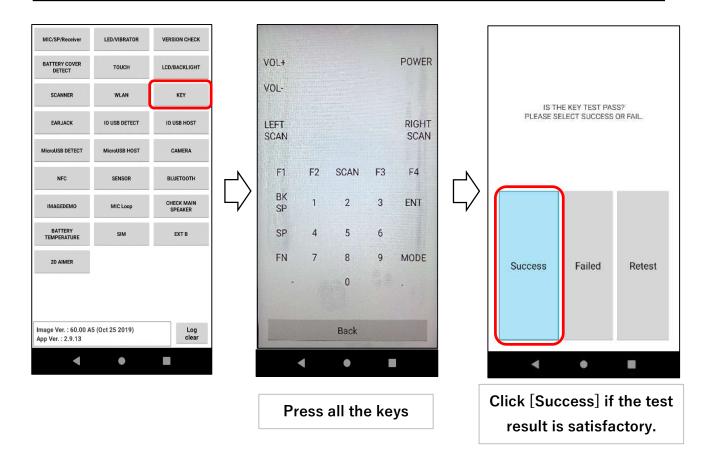

■ EARJACK

Attach the headset to the IT-G600.

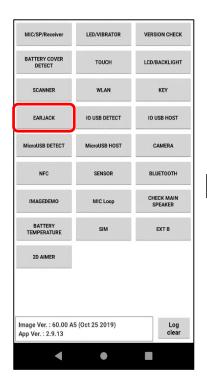

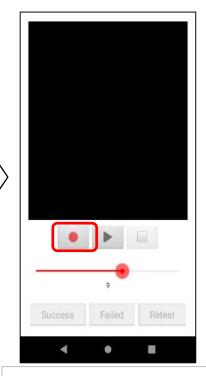





Press the "Record" button to record the voice


Press the "Play" button to play the recorded voice






Click [Success] if the test result is satisfactory.

■ IO USB DETECT

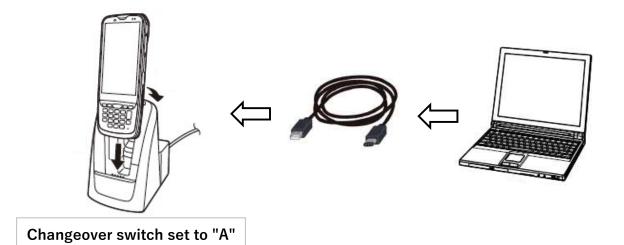


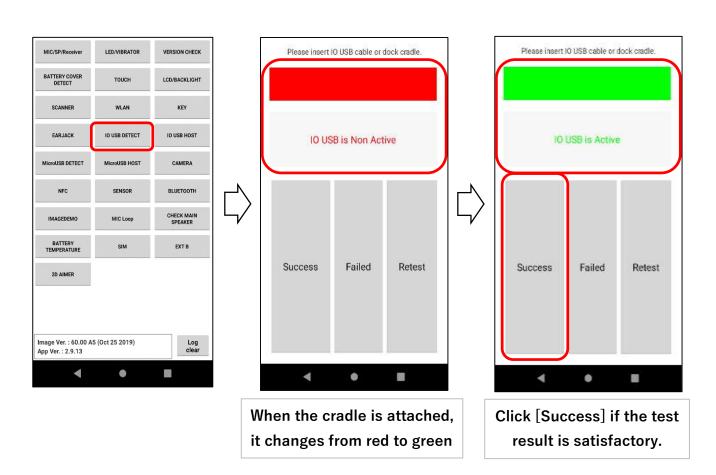


■IO USB HOST




Changeover switch set to "B"

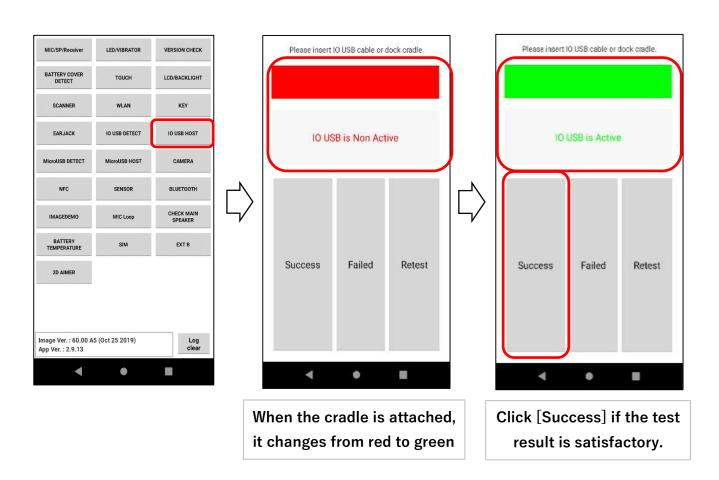


■ MicroUSB DETECT

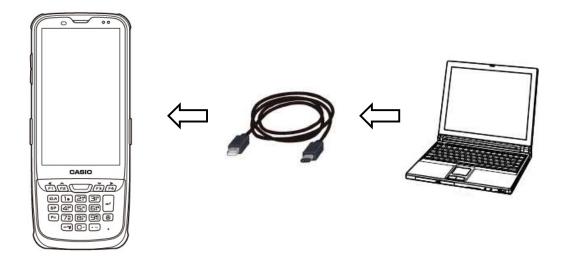

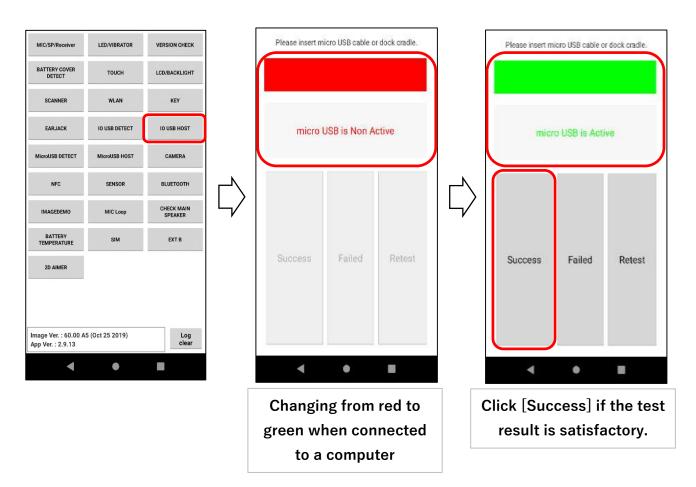


■ MicroUSB HOST



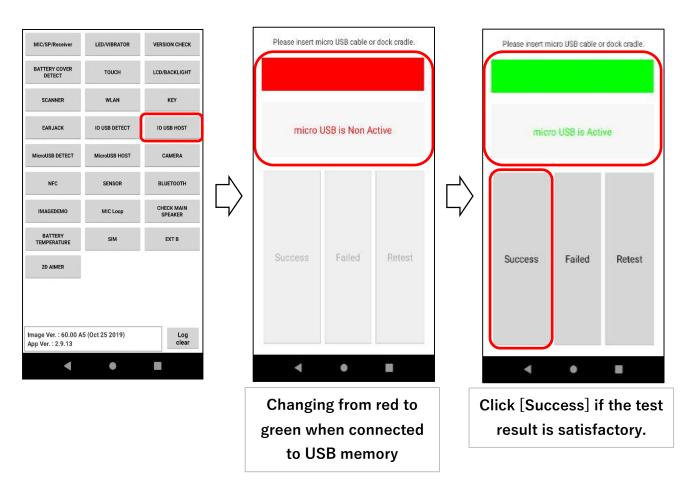

■ CAMERA

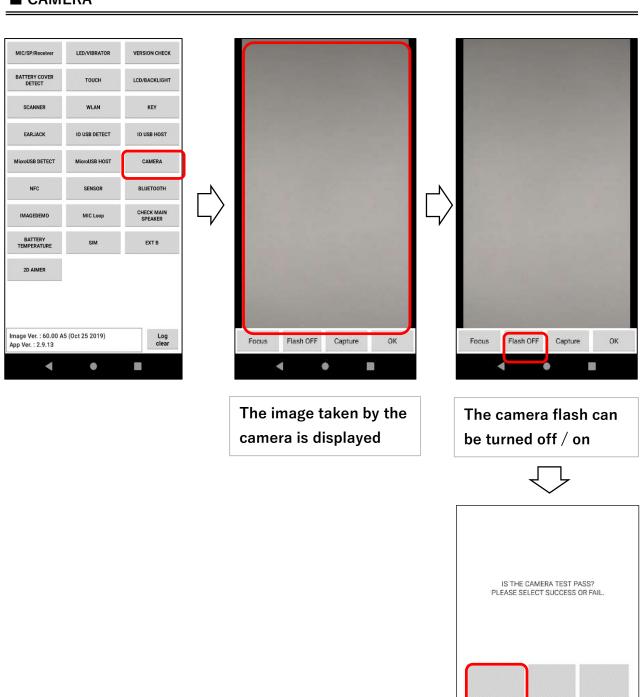

Click [Success] if the test result is satisfactory.


•

Failed


Retest

Success

■ NFC

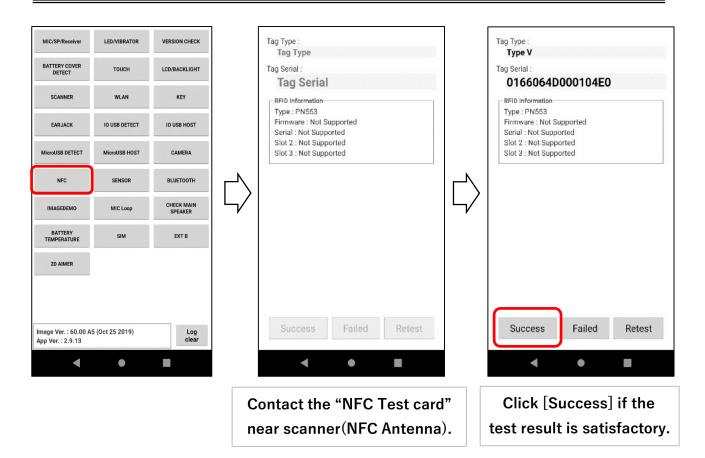

■ SENSOR

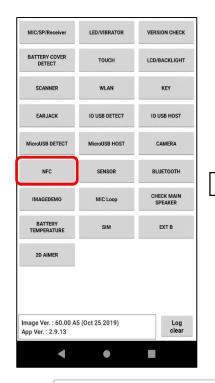





Click [Success] if the test result is satisfactory.

ACCEL(accelerometer)

⇒Shake the product up / down / left / right

MAGNETIC(geomagnetic sensor)

⇒Will be confirmed automatically

GYRO(gyro sensor)

⇒Shake the product up / down / left / right

LIGHT(illuminance sensor)


⇒ Cover the top of the product
Shine strong light on the top of the product

PROXI(Proximity Sensor)

⇒Cover the top of the product

result is satisfactory.

■ BLUETOOTH

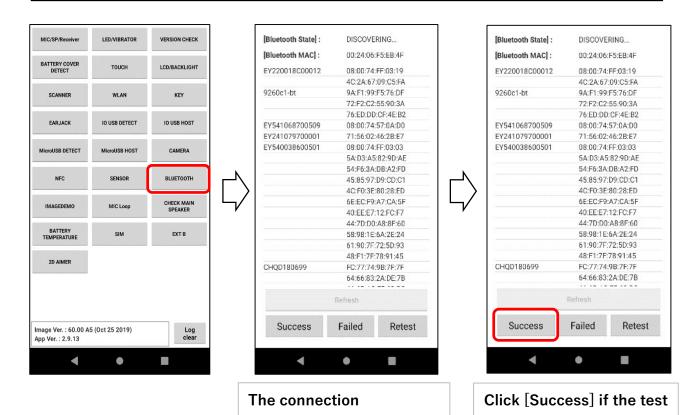

destination is displayed

WAN

Please confi rm that the content of the SIM card is displayed. It will pass if the contents are displayed.



6. Checking The Default Settings (When the main PCB is replaced)


6-1. UPDATING OS

After repairing, the OS should be updated to the latest version of the terminal currently shipped to the market. The latest OS fi le can be downloaded from the following URL.

https://dealer.casio.jp/system_en/pa/PADealer/support_soft_form.php?CLASS=Software&ID=IT-G600

- (1) Preparation of OS image file
 - Install the microSD card in which the OS update image fi le is written in IT-G600.
- (2) OS update operation

Run "Settings" and start the OS update operation as follows.

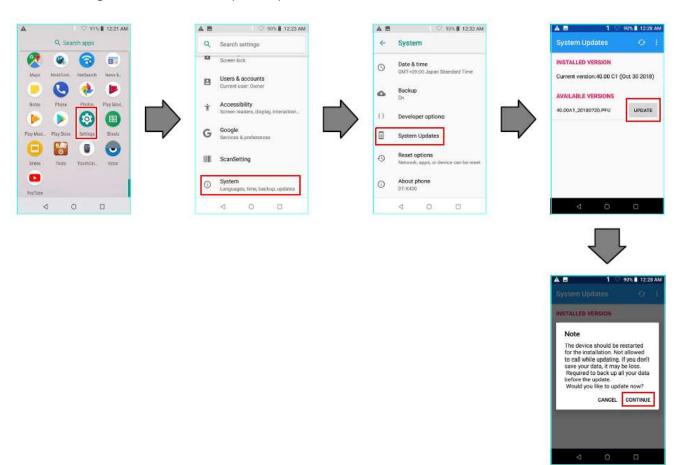

(3) Checking for OS update

Check the OS version by selecting "Settings" "About phone" "Build number" in that order. (See the following fi gures.)



7. Initializing the Device

